T, I	`]	L	_`_					لد نا	`]	_	
		`₹.	RS	5 T	CŁ	AS	S	5∙0	/	\	
//	\	/	\	/	\			/	\		\
		<u> </u>									
$ \rangle$	< I		< I		($ \rangle$	($ \rangle$	<		(
K I											
	< I										
			\								
		\		\	/		/				/
	\	/	\						\		\
_		< l									
$ \rangle$	≤ 1		< I		(レン	(レン	< I		(
Ľ											
	1	\rightarrow			Ź				_		_
	\	1	\		Z	1			\		\
	/	\	/	\	K	Х.	/		/		/
//			\	_		/	\leq	/_			\
<u> </u>	2). <i>I</i>	\ 1	$\overline{}$	W	V I	₿	M	V		
レン	1 □)	3 1	رب	1/		0	ハ	(1)		
		\ <u> </u>		A	UE) T	0/				_
//	\		\		\	/	\	/	\		\
		\					/		/		
12	<u> </u>		·		(12	(12	\		(
K I				(K I		Ľ I			
	$\langle \ $										
/	_		\		\				\		

USER MANUAL

Positioning

Place the earbud in

vour ear with the

"B" logo facing

out. Rotate the

position

earbud until you

find a comfortable

Contents

Varranty 2	2
Pairing3	3
Fix Connection 4	ļ
loise Cancelling5	j
Controls 6	ò
it & Positioning 7	,
Charging 8	3
Specifications10)

1-Year Warranty

Thank you for purchasing the FirstClass 50 wireless earbuds

You are covered by our 1-Year Warranty

Register for your free warranty at: www.backbaybrand.com/warranty



How to Power On/Off

- · To power on, remove the earbuds from the case or hold the back of each earbud for 5 seconds
- To power off, place the earbuds in the case or hold the back of each earbuds for 5
- If the case is completely out of battery. the earbuds won't turn off automatically

Pairing for the First Time

- 1) Remove any protective plastic from the bottom of the earbuds
- 2) Place the earbuds in the charging case
- 3) Remove both earbuds from the charging case and they will automatically turn on and connect to each other
- 4) Go to the Bluetooth menu on your device and select "Back Bay FirstClass 50"
- 5) If your phone shows a Bluetooth Pairing Request, press "Pair"

If the earbuds don't connect to each other, please follow the directions on the next page -

Fixing a Connection Issue

- 1) In your phone's Bluetooth settings, find "Back Bay FirstClass 50" and click "Forget this Device" or "Unpair"
- 2) Open the lid of the case and keep the earbuds in the case
- 3) Press and hold the button on the bottom of the case for 7 full seconds until you see a green light flash on the earbuds
- 4) Close the case for 5 seconds
- 5) Open the case and remove the earbuds. You should see "Back Bay FirstClass 50" in your phone's Bluetooth menu



 
If you don't see it in your Bluetooth menu, turn your phone's Bluetooth off and on again

Noise Cancelling

Hold LEFT bud for 2 sec to switch modes:

- 1. Transparency Mode
- 2. Active Noise Cancelling ON 3. Active Noise Cancelling OFF

When the earbuds turn on, they will start in Pass-Through Mode, which allows you to hear your surroundings



Controls

Left Earbud Right Earbud



Volume Down Tap Left Bud Noise Cancelling On/Off Hold Left Bud for 2 Sec Voice Assistant

Volume Up Next Sona Hold Right Bud for 2 Sec Bass Mode On/Off

Pause/Play

Double-Tap Either Bud Once Power On/Off

Triple-Tap Left Bud Triple-Tap Right Bud

Press and Hold Buds for 5 Seconds

Phone Calls

Answer Call Tap Either Bud Once End Call

Double-Tap Either Bud

Reject Incoming Call Hold Either Earbud

Specifications

- Bluetooth Version: 5.4
- Profiles Supported: HSP, HFP, A2DP. AVRCP, HI-RES LDAC
- · Microphone Features: CVC Noise Cancellation
- · Supports Cellphone Voice Assistants
- Wireless Range: 10m
- Battery Capacity: o Earbuds: 35 mAh
- o Charging Case: 500 mAh
- · Earbud Playtime without ANC: Up to 5 Hours
- Earbud Playtime with ANC: Up to 4 Hours
- · Charging Case Recharges Earbuds: 4 times on a single case charge
- · Charging Time: About 2 Hours
- Frequency Range: 20 Hz 20,000 Hz

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

- -Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

FCC ID: 2ATOY-RT612AE

Please read this manual carefully before use.

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.

Safety Warnings

Do not place near any open flames.

Dispose of batteries responsibly and be aware of the environmental effects of battery disposal. Do not expose batteries installed to excessive heat.

SUPPORT@BACKBAYBRAND.COM

WWW.BACKBAYBRAND.COM

Choose the Right Ear-Tip GREAT FIT = GREAT NOISE CANCELLING



If you are having trouble putting on the tips, visit our site for help: backbaybrand.com/eartips

How to Charge

Charging the Earbuds

- Simply place the earbuds in the charging case (Make sure they are not wet)
- · When you put the earbuds into the case, the front LED light will slowly pulse white, indicating that the earbuds are charging
- The case will recharge the earbuds 4 full times before you need to recharge the case

Charging the Case

· Locate the USB-C cable included in the accessory box, and plug it into the back of the case

Do not use a charger that exceeds 5V 1A. Higher voltage may damage the battery

Helpful Charging Tips

- If the earbuds don't turn off when you put them in the case and close the case, it means the case is fully out of battery and needs to be recharged.
- You can leave the charging case plugged in as long as you'd like and it won't over-charge. We have designed the electronics to prevent over-charging.

